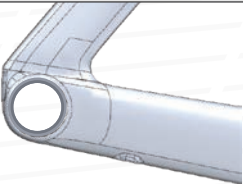
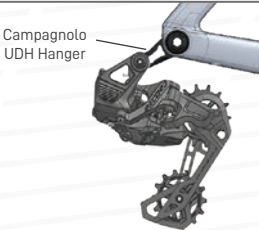
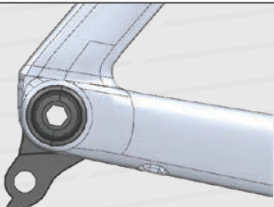
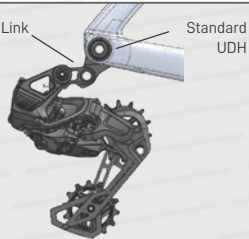
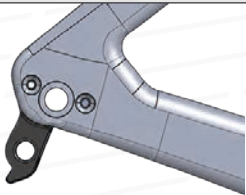
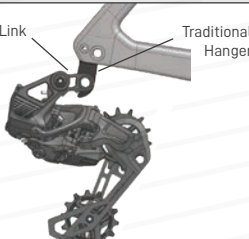
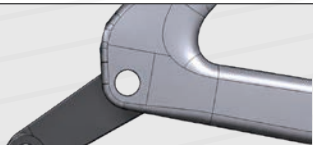
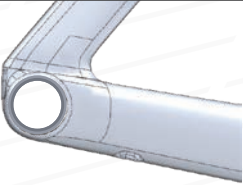
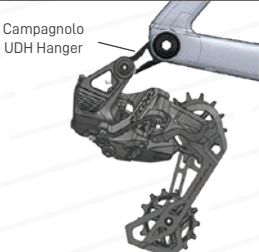
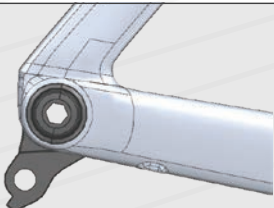
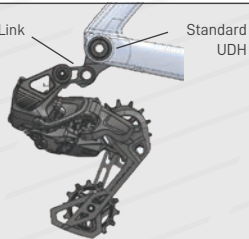
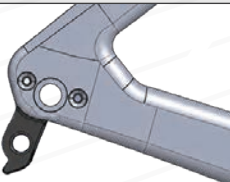
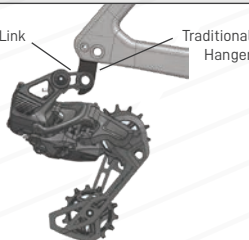
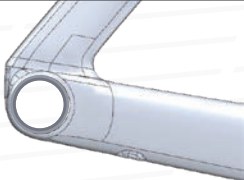
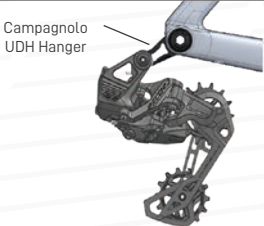
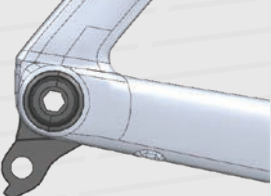
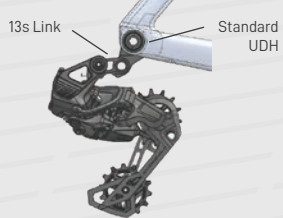
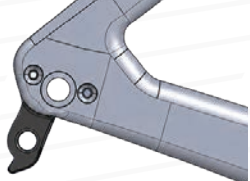
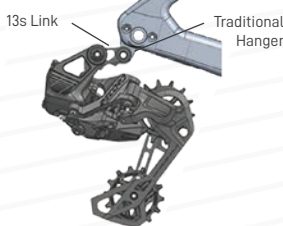
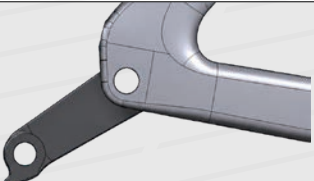
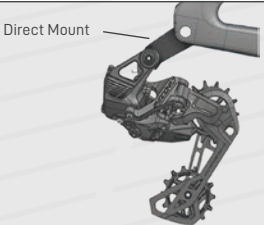
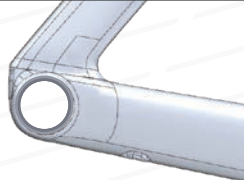
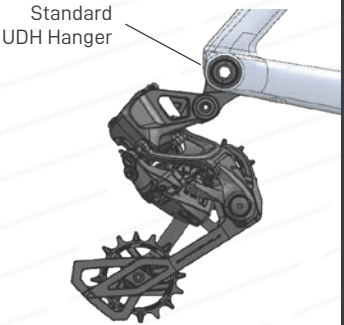
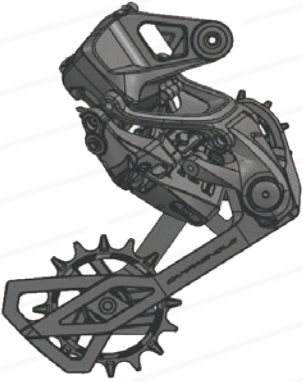
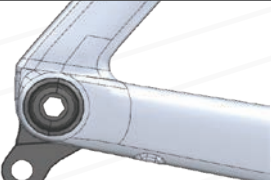
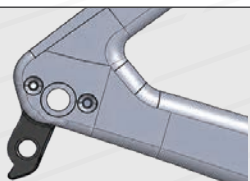
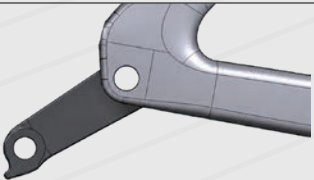
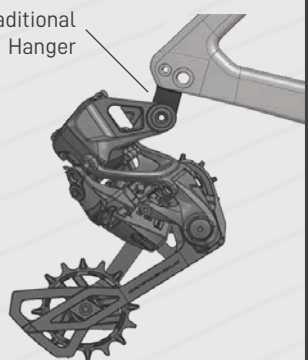


REAR DERAILLEUR	FRAME STANDARD	ACCESSORIES	CORRECT ASSEMBLY
code: RD02-SR13DHWRL	 UDH FRAME		 Campagnolo UDH Hanger
 SR13 RD WITH CAMPAGNOLO UDH	 UDH FRAME + STANDARD UDH	code: RD03-13SJ or RD-SR210  REPLACE CAMPAGNOLO UDH WITH THE CAMPAGNOLO LINK	 13s Link Standard UDH
	 TRADITIONAL FRAME + TRADITIONAL HANGER	code: RD03-13SJ or RD-SR210  REPLACE CAMPAGNOLO UDH WITH THE CAMPAGNOLO LINK	 13s Link Traditional Hanger
	 TRADITIONAL FRAME + DIRECT MOUNT HANGER	REMOVE CAMPAGNOLO UDH HANGER AND REPLACE THE REAR DERAILLEUR ADJUSTMENT SCREW WITH THE LONGER VERSION SUPPLIED IN THE BOX.	 Direct Mount
code: RD02-SR13WRL code: RD02-SR13WRLC	 UDH FRAME	code: AC26-UDHDM  REPLACE CAMPAGNOLO LINK WITH THE CAMPAGNOLO UDH	 Campagnolo UDH Hanger
 SR13 RD WITH 13s LINK	 UDH FRAME + STANDARD UDH		 13s Link Standard UDH
	 TRADITIONAL FRAME + TRADITIONAL HANGER		 13s Link Traditional Hanger
	 TRADITIONAL FRAME + DIRECT MOUNT HANGER	REMOVE SR13 LINK AND REPLACE THE REAR DERAILLEUR ADJUSTMENT SCREW WITH THE LONGER VERSION SUPPLIED IN THE BOX. • CHECK INSTRUCTION •	 Direct Mount

REAR DERAILLEUR	FRAME STANDARD	ACCESSORIES	CORRECT ASSEMBLY
code: RD03-RE13DHWRL code: RD03-RE13DHWRLC	 UDH FRAME		 Campagnolo UDH Hanger
 RE13 RD WITH CAMPAGNOLO UDH	 UDH FRAME + STANDARD UDH	code: RD03-13SJ NOT use code: RD-SR210  REPLACE CAMPAGNOLO UDH WITH THE CAMPAGNOLO LINK	 13s Link Standard UDH
	 TRADITIONAL FRAME + TRADITIONAL HANGER	code: RD03-13SJ NOT use code: RD-SR210  REPLACE CAMPAGNOLO UDH WITH THE CAMPAGNOLO LINK	 13s Link Traditional Hanger
	 TRADITIONAL FRAME + DIRECT MOUNT HANGER	REMOVE CAMPAGNOLO UDH HANGER AND REPLACE THE REAR DERAILLEUR ADJUSTMENT SCREW WITH THE LONGER VERSION SUPPLIED IN THE BOX. • CHECK INSTRUCTION •	 Direct Mount

SUPER RECORD X / RECORD X

REAR DERAILLEUR	FRAME STANDARD	ACCESSORIES	CORRECT ASSEMBLY
code: RD02-SRX13WRL code: RD03-REX13WRL	 UDH FRAME	DO NOT USE Campagnolo UDH Hanger code: AC26-UDHDM	 Standard UDH Hanger
	 UDH FRAME + STANDARD UDH	ONLY THE STANDARD UDH HANGER MUST BE USED.	
	 TRADITIONAL FRAME		
	 DIRECT MOUNT	REPLACE THE DIRECT-MOUNT HANGER WITH A TRADITIONAL HANGER AND MOUNT THE X REAR DERAILLEUR DIRECTLY ON IT, WITHOUT USING ANY OTHER LINKAGE OR ADAPTER. • CHECK INSTRUCTION •	 Traditional Hanger